


INSTALLATION OF CART & TRACK

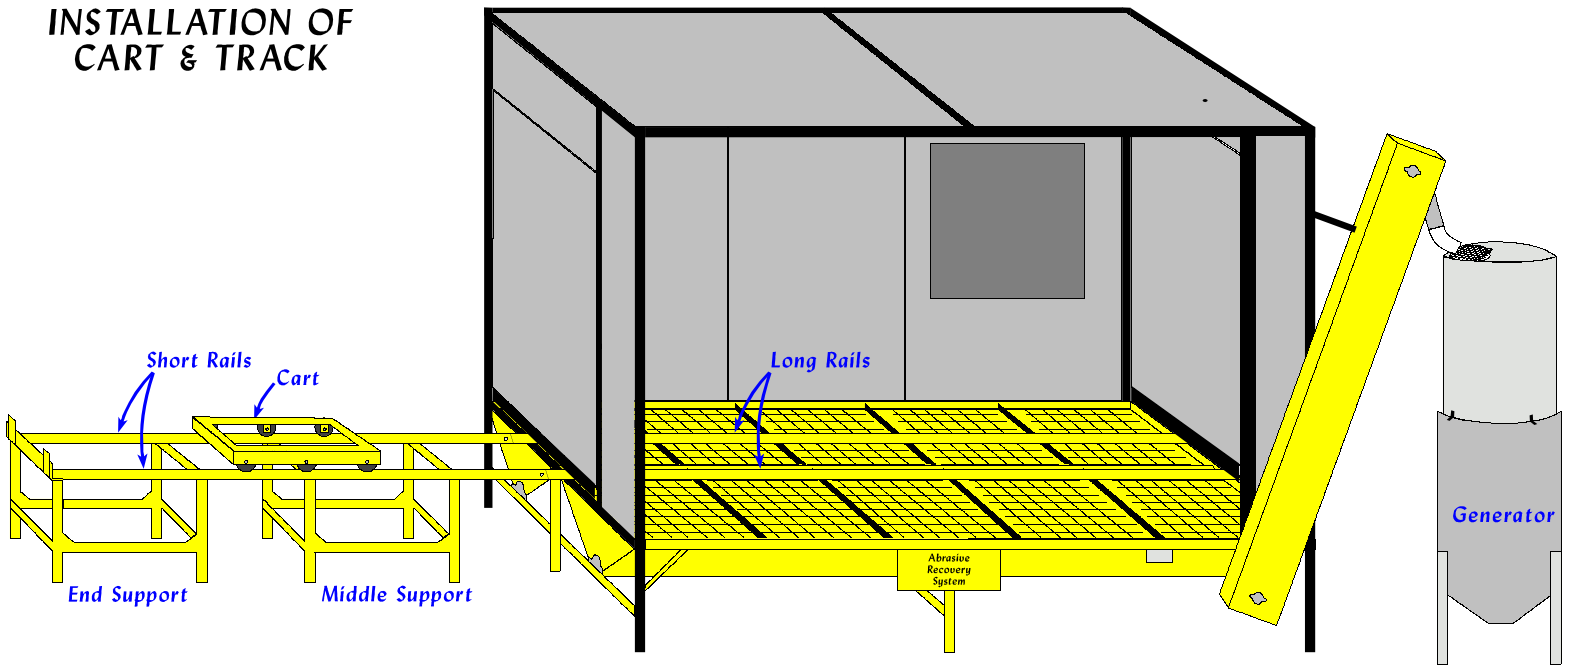

1. Place (2) long rails on Abrasive Recovery System. Each rail has a drilled hole in end toward extended track.
2. Place cart on rails. Adjust position of rails so sandblast nozzle will be about correct distance from monument setting on cart.
3. Move middle support and end support into position.
4. Connect short rails to long rails with 3/8" bolts, nuts, & lockwashers. Loosely bolt rails to middle and end supports.
5. Check each leg for contact with floor. If not in contact, extend threaded leveling bolt at bottom of leg.